



FD05-90/A5000-09 Installation Instructions

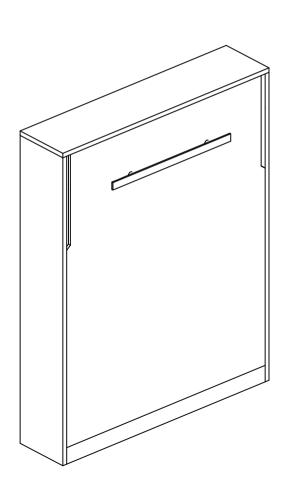

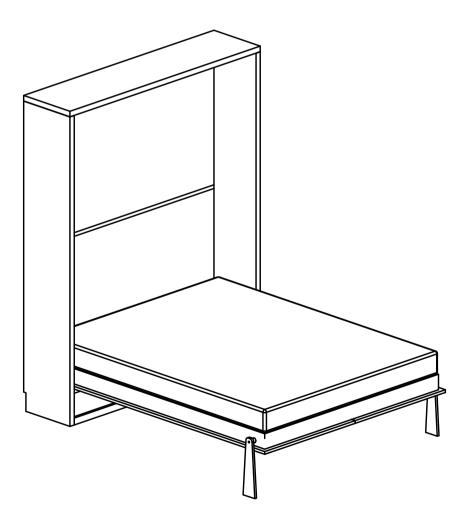

Installation instructions:

- 1. Please employ professional furniture installation person to install, Please read the installation drawings carefully before installation.
- 2. First determine the type of wall before installation, according to the different wall to adopt the corresponding installation method; If the wall can not bear the installation safety requirements of this product, it is suggested that it should not be installed and used.
- 3. The installation process must be operated in accordance with the steps shown in the drawings, pay attention to the installation of safe operation.
- 4. If you encounter special problems,, please call the company service phone.

Different walls that need to be used fixed screws:


1. Heavy brick (red brick): use explosion-proof screws, use punch a hole with a percussion drill.

2. Lightweight brick(gray brick): use plastic expansion screws, use electric hand drill to drill holes.


3. Lightweight brick: the use of special expansion screws, use electric hand drill to drill holes.


l omy	
NO. Part name QTY	
1 Side panel 2	D , 1 · ,
2 Top panel 1 3 Back brace panel 1 2	Part list
4 Back brace panel 2 1	
5 bandage 2	
6 Skirting line 1	
7 Back angle iron 2	
8 Bottom panel 1	
9 Door panel 1	
10 Bedstead 1	
11 Leg 1	
12 Back panel 1 1	
13 Back panel 2 1	
14 Transverse battle 1 plate	
15 Aluminum trim 1	
16 Handle 1	
	46
	\downarrow_{11} $\stackrel{5}{=}$


Accessories list

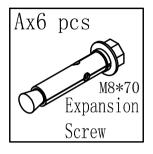





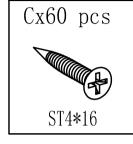

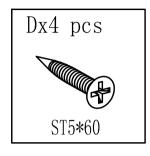

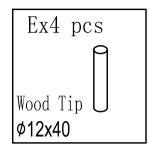

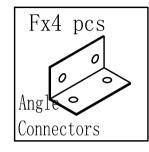


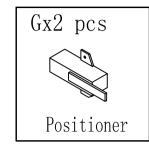










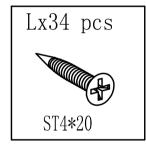

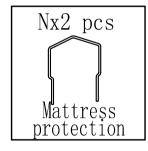

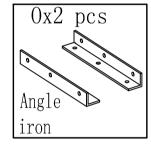

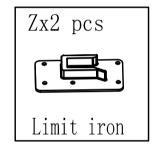

Tool




















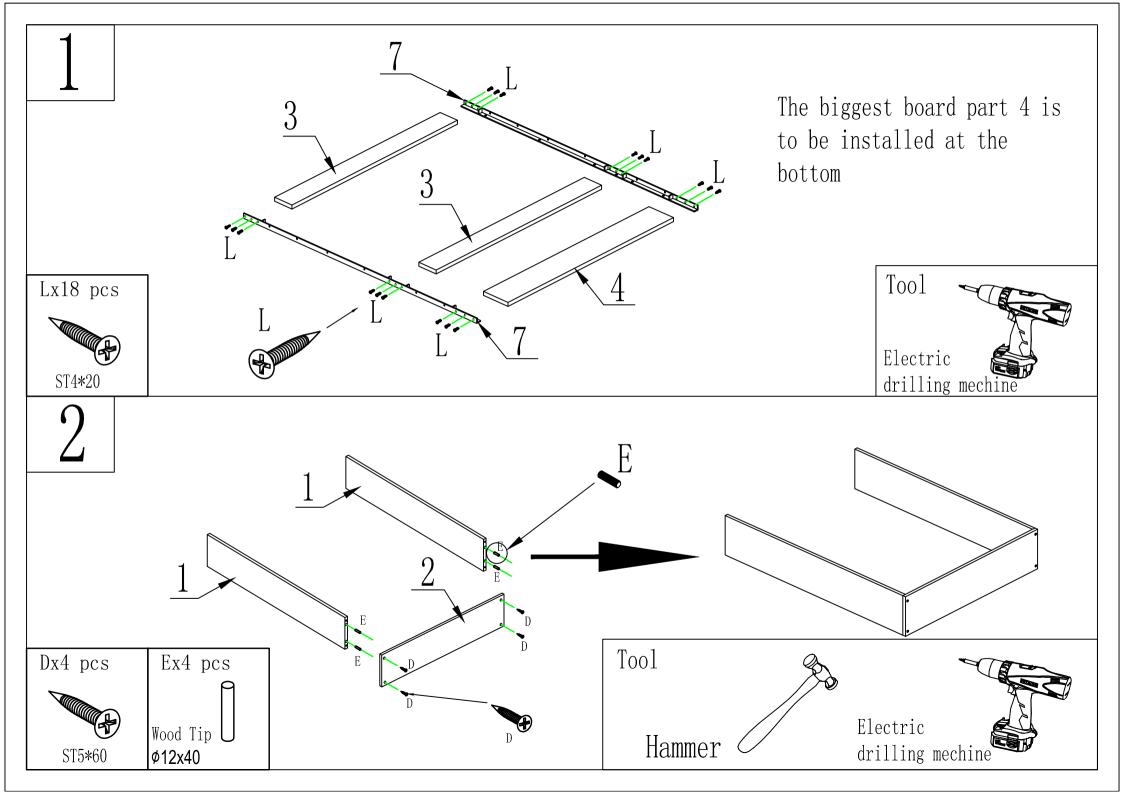


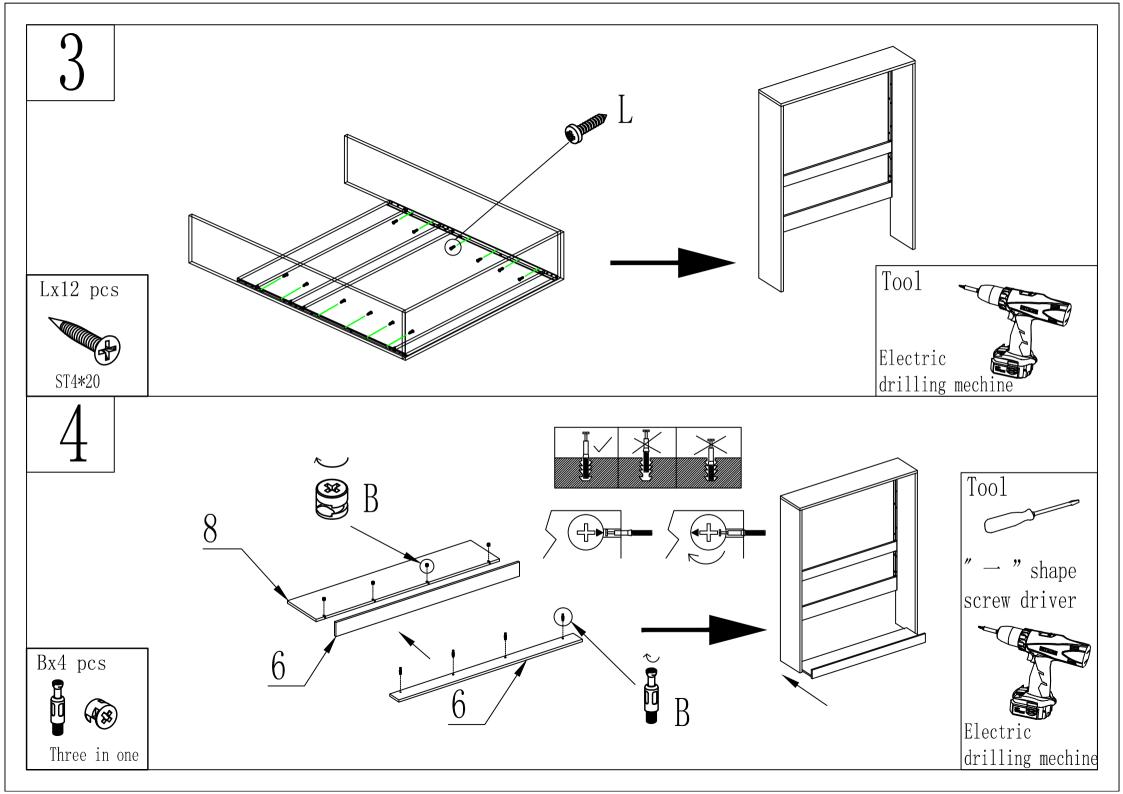


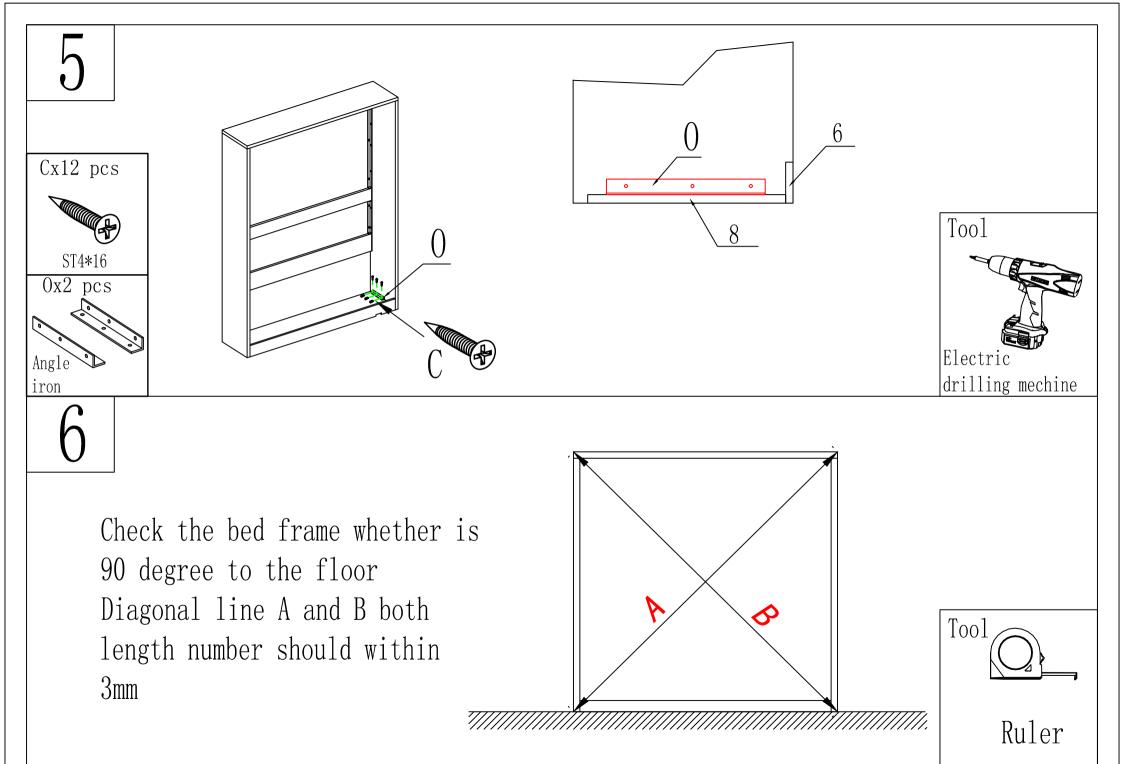

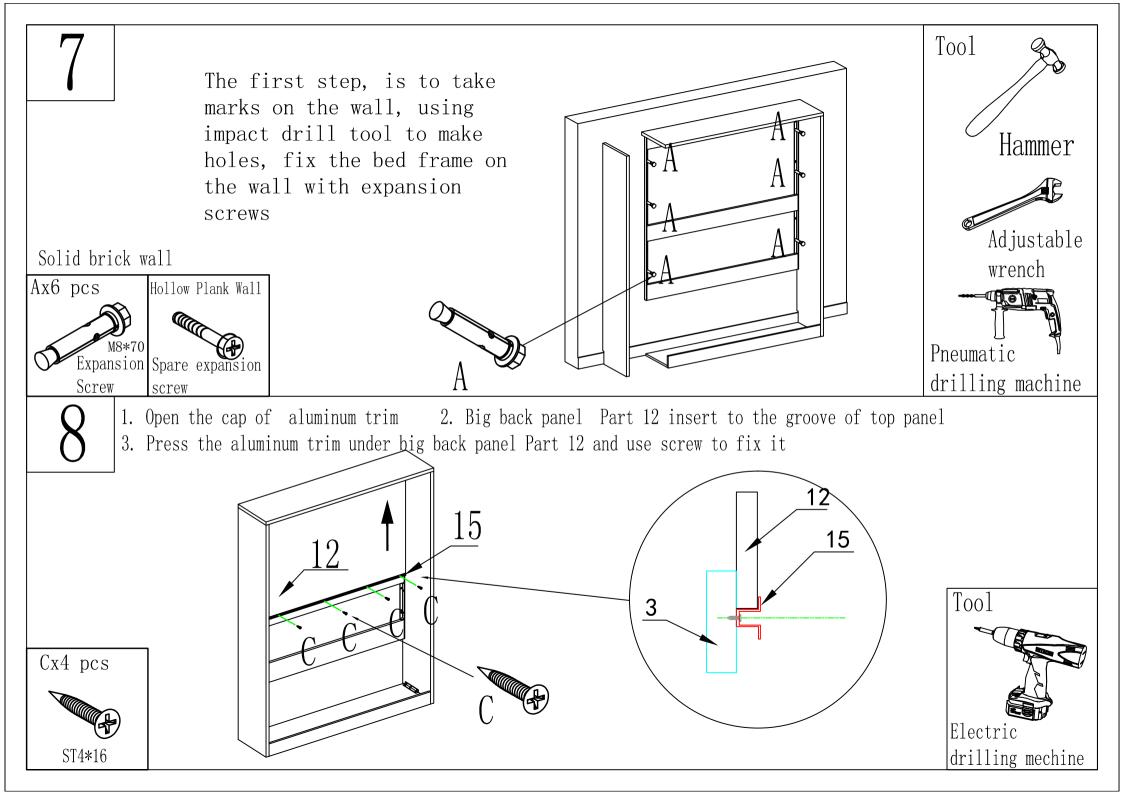


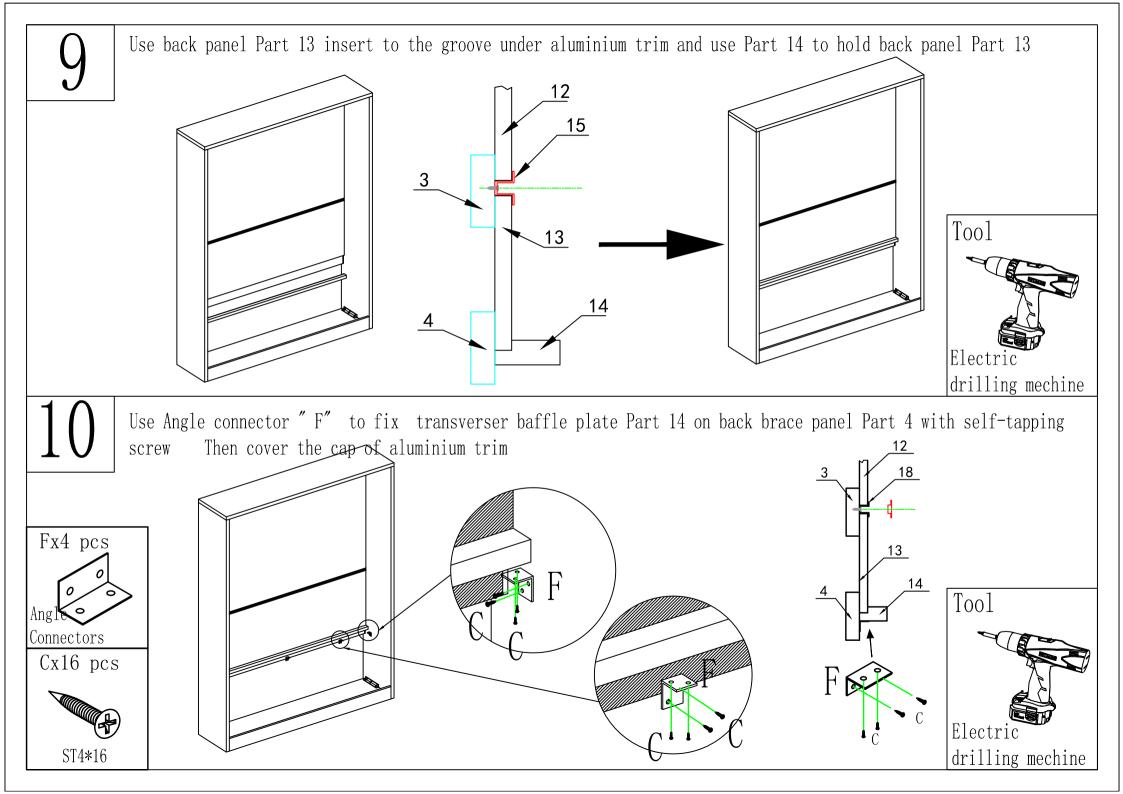


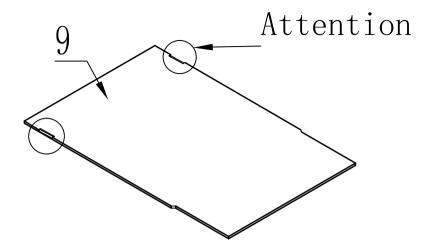


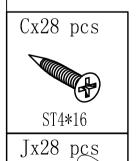


M6*16
Round head self tapping

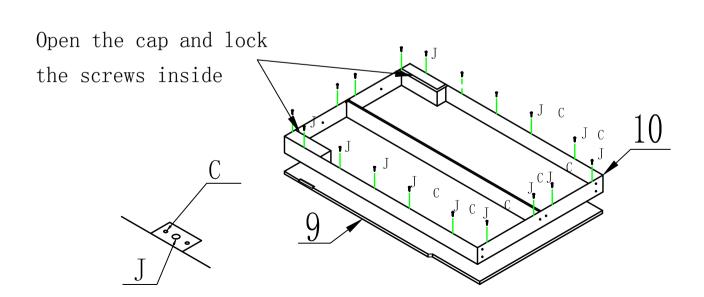

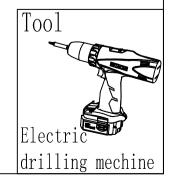

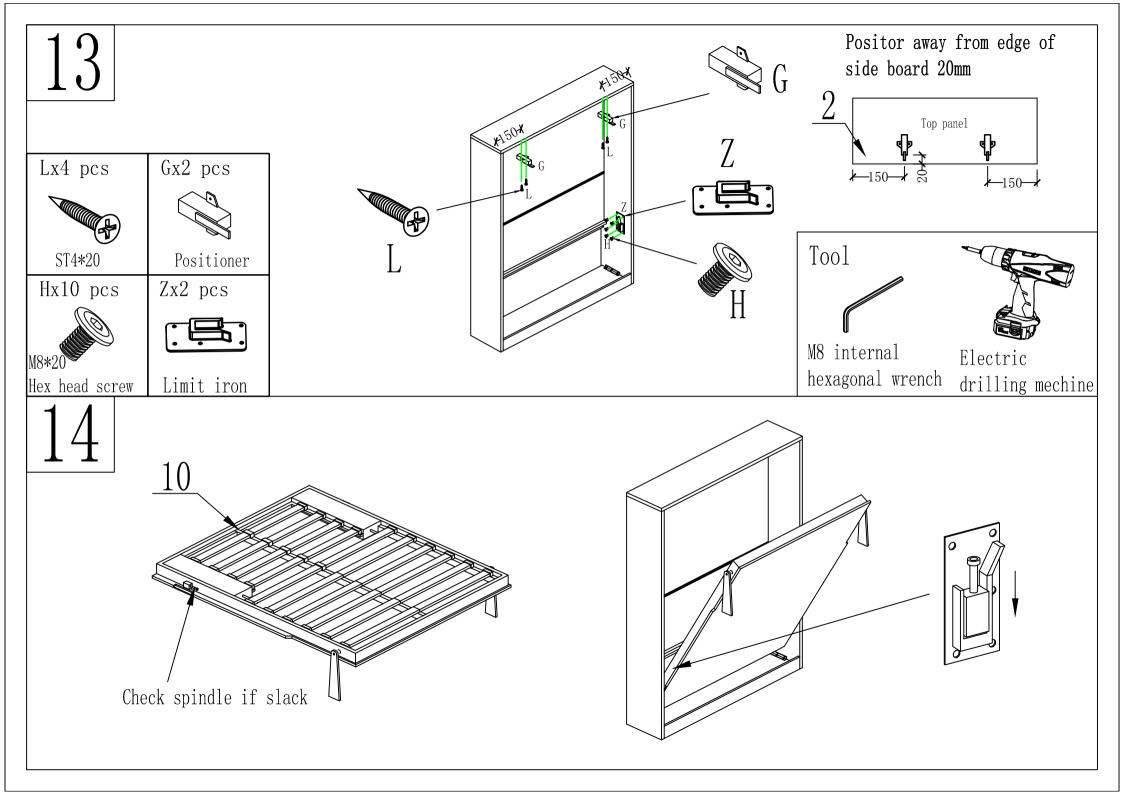

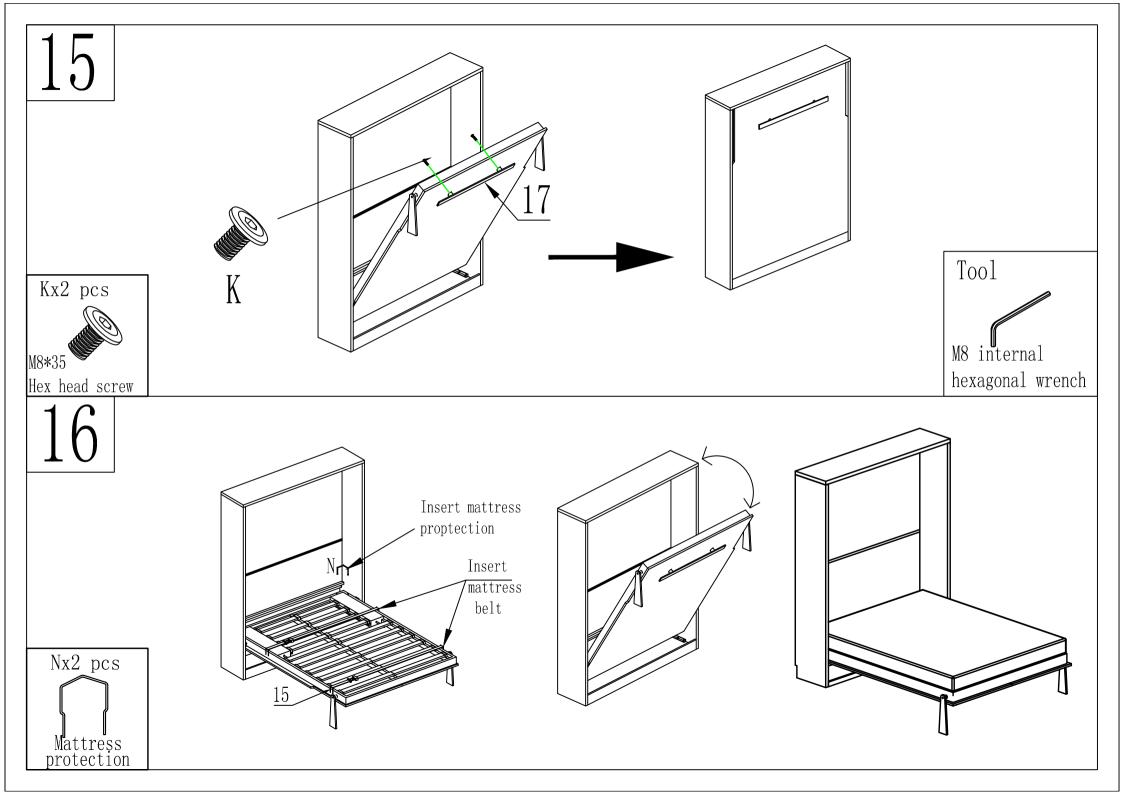

17

Adjustment Introductions

I. Wall bed Gap adjustment

This bed needs to flip up and down, for around the general will be reserved for about 1cm gap to facilitate the use, the diagonal size needs to be corrected before the bed is connected to the wall.



If the left and right gap size uneven, please check the diagonal size of bed frame first, if the diagonal size is right, please adjust the screw clockwise of the smaller gap side, back and forth debugging to the best of the situation



2. Wall bed Spring adjustment

After installing the wall bed, we need to debug spring function device. Close the bed into the angle of 30 °, with a wrench to adjust the nut on the screw (Note: clockwise twist tighten the spring tension, counterclockwise twist to loose spring tension), the screw exposed length is about 60-80MM (that is the distance from the top of the nut to the screw).

The correct spring situation is the bed can stop in the open angle of 30 °, the bedstead would not appear to rebound after landing, back and forth debugging to the best of the situation.

